



EQUIPMENT AUTOMATION: GRADING

 **TOPCON**



Grading

System Five
Operator's Manual





Grading System Five Operator's Manual

Part Number 7010-0485

Rev. B

©Copyright Topcon Positioning Systems

August, 2003

All contents in this manual are copyrighted by Topcon. All rights reserved. The information contained herein may not be used, accessed, copied, stored, displayed, sold, modified, published, or distributed, or otherwise reproduced without express written consent from Topcon.

Table of Contents

Preface	v
Terms and Conditions	v
Manual Conventions	viii
Chapter 1	
Introduction and Setup	1-1
Getting Acquainted	1-2
Control Box	1-2
TM-1 Mast or Vibration Pole	1-3
Laser Receiver	1-4
Sonic Tracker II	1-4
Slope Sensor	1-5
System Five Setup	1-6
Setup with TM-1 Mast	1-9
Setup with Trackerjack and Vibration Pole	1-13
Care and Maintenance	1-15
Chapter 2	
Control Box Usage	2-1
Control Box	2-2
LCD Display	2-3
Light Sensor for Grade Adjustment Arrows	2-3
Power Switch	2-3
Grade Adjustment Direction Arrows	2-4
Grade Adjustment Knob	2-4
Grade Adjustment LEDs	2-5
Function Indicator LEDs	2-6
Set/Menu Button	2-6
Using the Set Mode	2-6

Using the Menu Mode	2-7
Elevation Offset Button and Elev/Avg Button	2-7
Using the Elevation Offset Button	2-7
Using the Elev/Avg Button	2-8
View Current Elevation	2-8
View Average Elevation	2-9
Clear Average Elevation	2-9
Elevation/Slope Button	2-10
Setting the Elevation Mode	2-10
Setting the Slope Mode	2-10
Search/Survey Button	2-10
Using the Search Function	2-11
Using the Survey Function	2-11
Auto/Manual Button	2-11
Using the Auto/Manual Mode	2-12
Using the Survey Mode	2-12
Manual Record	2-12
Auto Record	2-13
Average Elevation	2-13
Making Selections in the Performance Menu	2-13
Jog Button	2-13
Determining Timed Valve Output Values	2-14
Pressing the Raise Jog Button	2-14
Pressing the Lower Jog Button	2-15
Performance Menu	2-15
Gain (Elevation)	2-19
Gain (Slope Control)	2-20
Valve Offset	2-22
Averaging	2-25
Elevation Deadband	2-26
Slope Deadband	2-28
Beeper Alarm	2-29
Units	2-31
Test	2-32
Elevation Offsets (Setpoints)	2-34
Record	2-35

Timed Outputs	2-36
Chapter 3	
Laser Setup	3-1
Laser Placement	3-2
Small Project Laser Transmitter Placement	3-3
Large Project Laser Transmitter Placement	3-4
Multiple Pads Laser Transmitter Placement	3-5
Hilly Pads Laser Transmitter Placement	3-5
Laser Transmitter Calibration	3-6
Laser Axis Alignment	3-8
Automatic Alignment	3-8
Manual Alignment	3-9
Conditions Affecting the Laser Transmitter	3-12
Laser Drift	3-12
Atmospheric Laser Bending	3-13
Setting Grade Reference Points	3-14
Other Factors Affecting Quality	3-16
Wind	3-16
Dust	3-16
Fog	3-17
Curvature of the Earth	3-17
Laser Accuracy and Repeatability	3-18
Chapter 4	
Grading	4-1
Grading Preparation	4-1
Laser Transmitter Setup	4-1
Setting the Cutting Edge to Grade	4-2
Setting the Elevation Reference Number	4-4
Use a True Elevation Reference Number	4-4
Use a Cut/Fill Value (0.00 Grade Reference)	4-4
Use Multiple Elevation Settings	4-5
Grading with the System Five	4-6

Chapter 5
Troubleshooting **5-1**
 Control Box Problems 5-2

Appendix A
Safety Precautions **A-1**

Appendix B
Limited Warranty **B-1**
 Electronic and Mechanical Components B-1
 Return and Repair B-1
 Warranty Disclaimer B-1

Index

Preface

This manual has been developed to provide the operator with information necessary to operate and maintain the TOPCON machine control lasers. Proper service and use is important to the reliable operation of the equipment. The procedures described herein are effective methods for performing service and operation of this system.



NOTICE NOTICE

Please read these Terms and Conditions carefully.

Terms and Conditions

USE – Please study this manual carefully. The benefits this product provides can be greatly influenced by your applications knowledge.

COPYRIGHT – All information contained in this Manual is the intellectual property of, and copyrighted material of TPS. All rights are reserved. You may not use, access, copy, store, display, create derivative works of, sell, modify, publish, distribute, or allow any third party access to, any graphics, content, information or data in this Manual without TPS' express written consent and may only use such information for the care and operation of your product. The information and data in this Manual are a valuable asset of TPS and are developed by the expenditure of considerable work, time and money, and are the result of original selection, coordination and arrangement by TPS.

TRADEMARKS – System Five™, Sonic Tracker II™, TM-1™, Trackerjack™, Topcon® and Topcon Positioning Systems™ are trademarks or registered trademarks of TPS. Windows® is a registered trademark of Microsoft Corporation. Product and company names mentioned herein may be trademarks of their respective owners.

DISCLAIMER OF WARRANTY – EXCEPT FOR ANY WARRANTIES IN AN APPENDIX OR A WARRANTY CARD ACCOMPANYING THE PRODUCT, THIS MANUAL AND THE PRODUCTS ARE PROVIDED “AS-IS.” THERE ARE NO OTHER WARRANTIES. TPS DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE OR PURPOSE. TPS AND ITS DISTRIBUTORS SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE OR USE OF THIS MATERIAL OR THE PRODUCT. SUCH DISCLAIMED DAMAGES INCLUDE BUT ARE NOT LIMITED TO LOSS OF TIME, LOSS OR DESTRUCTION OF DATA, LOSS OF PROFIT, SAVINGS OR REVENUE, OR LOSS OF THE PRODUCT’S USE. IN ADDITION TPS IS NOT RESPONSIBLE OR LIABLE FOR DAMAGES OR COSTS INCURRED IN CONNECTION WITH OBTAINING SUBSTITUTE PRODUCTS OR SOFTWARE, CLAIMS BY OTHERS, INCONVENIENCE, OR ANY OTHER COSTS. IN ANY EVENT, TPS SHALL HAVE NO LIABILITY FOR DAMAGES OR OTHERWISE TO YOU OR ANY OTHER PERSON OR ENTITY IN EXCESS OF THE PURCHASE PRICE FOR THE PRODUCT.

WEBSITE and OTHER STATEMENTS – No statement contained at the TPS website (or any other website) or in any other advertisements or TPS literature or made by an employee or independent contractor of TPS modifies these Terms and Conditions (including the Software license, warranty and limitation of liability).

SAFETY – Improper use of the Product can lead to injury to persons or property and/or malfunction of the product. The product should only be repaired by authorized TPS warranty service centers. Users should review and heed the safety warnings in Manual.

MISCELLANEOUS – The above Terms and Conditions may be amended, modified, superseded, or canceled, at any time by TPS. The above Terms and Conditions will be governed by, and construed in accordance with, the laws of the State of California, without reference to conflict of laws.

All information, illustrations, and applications contained herein are based on the latest available information at the time of publication. TOPCON reserves the right to make product changes at any time without notice.

Comments, suggestions, and questions about TOPCON products are welcomed. Contact your local TOPCON representative or a representative at our corporate facility.

TOPCON POSITIONING SYSTEMS, Inc.

5758 W. Las Positas Blvd.

Pleasanton, CA 94588

PHONE 925 / 460 1300

FAX 925 / 460 1315

Manual Conventions

This manual uses the following conventions:

Example	Description
---------	-------------

Power	Press or turn this button or knob.
--------------	------------------------------------



TIP

Supplementary information that can help you configure, maintain, or set up a system.



NOTICE

Supplementary information that can have an affect on system operation, system performance, measurements, personal safety.



CAUTION

Notification that an action has the potential to adversely affect system operation, system performance, data integrity, or personal health.



WARNING

Notification that an action *will* result in system damage, loss of data, loss of warranty, or personal injury.



DANGER

UNDER NO CIRCUMSTANCES SHOULD THIS ACTION BE PERFORMED.